

ML_BSB380 Adjustable Bench Seat Bracket

Note

This product is to be installed by suitably qualified persons, in a fit-for-purpose application, to suitable materials, using suitable fixings, and complying with any relevant codes.

Dimensions

450-470mmH x 150mmW X 380mmD

 
Hardware Provided

Please be aware that fixings are not included.

It is the responsibility of the installer to ensure that the surface/substrate that the unit is installed upon and the fixings used are suitable to withstand the weight-bearing loads of the unit and if required as per AS1428 / Australia building code regulations.

Before Installation

- Inspect the product. If there is any damage or missing parts, do not install the product and contact your place of purchase.
- Ensure the surface you wish to mount the bracket to is either solid or has adequate in-wall support.
- Ensure the surface you wish to mount the bracket to is flat.

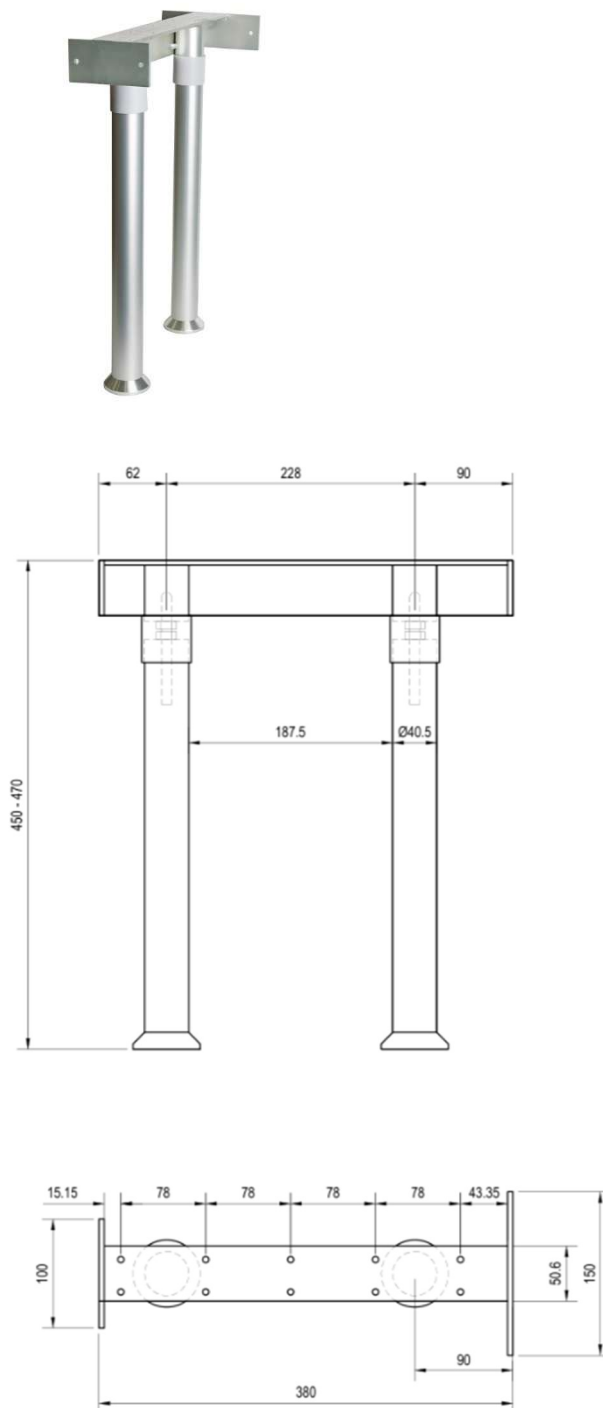


The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Instructions

Placement may be subject to regulations/codes and architectural drawings. Correct positioning is the responsibility of the installer.

 1. Mark the desired height of the bench seat on the wall or partition, checking that it is level.
2. Secure a strip of compact laminate or timber (not supplied) to the wall to fix the brackets to.
3. Locate and mark fixing position of the brackets on that strip, ensuring the brackets are level. Brackets should be spaced no more than 800mm apart.
4. Secure the brackets to the underside of the bench seat using appropriate fixings (not supplied).
5. Remove the protective sleeves from both threads protruding from the underside of each bracket, loosen or tighten the nuts to achieve the desired height of legs, position the covers to conceal the adjustment area, and screw both legs to each bracket.
6. Attach the bench seat frontal/apron plinth/panel to the front of the bracket (100mm side).
7. Mount the back of the bracket (150mm side) to the strip on the wall and adjust the feet as needed.

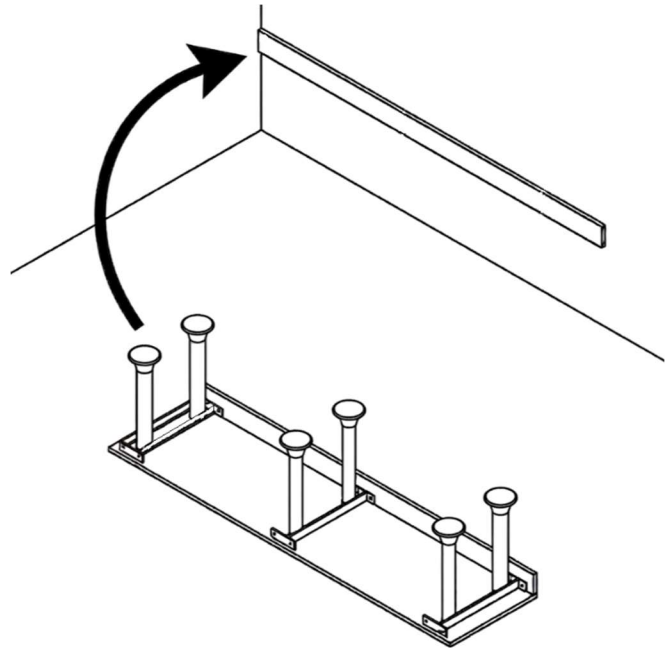

Technical recommendations and installation advice from Metlam Australia Pty Ltd are general in nature and provided in good faith without warranty. Metlam disclaims all liability for errors, omissions, or damage resulting from improper installation or maintenance. All products must be installed by qualified tradespeople and maintained by competent personnel. It is the installer's responsibility to conduct thorough pre-installation assessments; Metlam Australia will not enter into post-installation disputes regarding positioning, functionality, or external factors affecting performance.