

ML_IMC2_SS Integrated Mirror Cabinet Includes Soap Dispenser & Paper Towel Dispenser

Note

This product is to be installed by suitably qualified persons, in a fit-for-purpose application, to suitable materials, using suitable fixings, and complying with any relevant codes.

Dimensions


610mmH x 461mmW X 197mmD

Hardware Provided

- 4x M8 60mm Expansion Bolts
- 2x Keys
- 1x 7mm Socket Screwdriver

Before Installation

- Inspect the product. If there is any damage or missing parts, do not install the product and contact your place of purchase.
- Ensure the wall is either solid or has adequate in-wall support.
- Ensure the wall is plumb/flat without any raised surfaces.
- Check that there will be adequate clearance for the door to be opened once installed. (The door is hinged on the left-hand side.)
- Two people are required for installation.

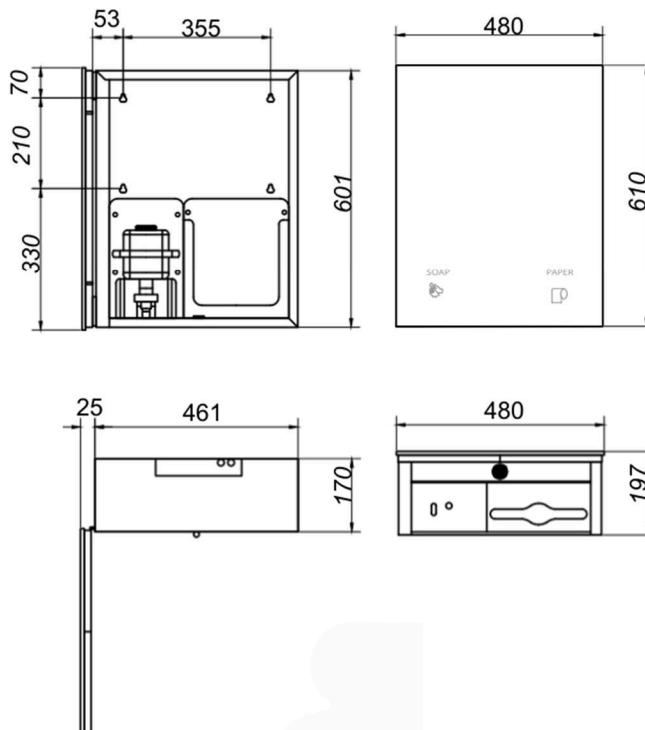

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Instructions

Placement may be subject to regulations/codes and architectural drawings. Correct positioning is the responsibility of the installer.

1. Remove the cabinet from the packaging. Lift from underneath the cabinet, do not lift using the mirror door.
2. Locate the four keyhole slots at the rear of the cabinet.
3. Open the mirror/door to approximately 45°. Lift the cabinet to the wall based on the desired installation height* and location of studs, and checking that all sides are level, mark four mounting points on the wall through the keyhole slots.

*To ensure the soap dispenser sensor functions optimally, the base of the cabinet should be installed at a height of 950-1050mm from the floor.

4. Loosely install four suitable fasteners into the wall at the marked locations.
5. Open the mirror/door to approximately 45°. Lift the cabinet to the wall and slowly align the keyhole slots with the fasteners on the wall and tighten them.
6. Apply neutral cure silicone to all edges where the cabinet meets the wall.
7. Ensure the power switch on the right-hand of the soap dispenser (see Figure 1) is slid down into the on position and that 4x C batteries are installed.
8. Peel the protective film off the mirror.
9. Retain the keys and socket screwdriver for the end user.




Figure 1

Connecting To Mains Power


An optional power adaptor is available to suit the soap dispenser - ML_IMC2_POWERPACK.

1. Insert the AC plug into a power outlet above the cabinet (up to 300mm away).
2. Thread the cable through one of the two holes in the top of the cabinet.
3. Insert the DC plug into the socket on the right-hand of the soap dispenser.

 How to Replace the Batteries in the ML_IMC2_SS

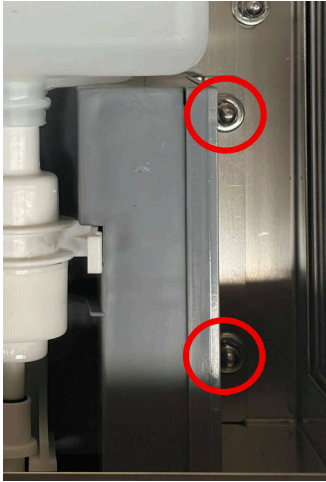

1. Using the provided socket screwdriver, loosen the nuts on each side of the soap dispenser.

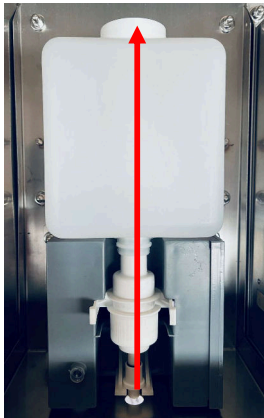

2. Slide the soap dispenser in an upwards direction to remove it from the cabinet.




3. Slide the battery compartment cover off in the direction of the arrow.

4. Replace the 4x C batteries.



5. Please ensure the power switch is in the on position.
Up is off and down is on.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

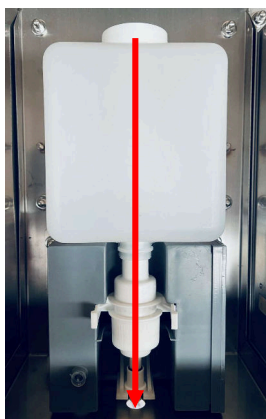

6. Slide the soap dispenser back down to reinstall it in the cabinet and fasten the nuts.

How to Fill the Soap in the ML_IMC2_SS

A Commercial Grade Liquid Soap* with a Viscosity range of 100 – 3,800 cps (centipoises) and a PH level between 6.50 – 9.00 should be used in this dispenser to ensure the dispenser performs at an optimal level.

* Any soap used not in line with the advice above may cause the unit to operate at a sub-optimal level, fail or damage the unit and could void the Metlam Australia product warranty.

Unscrew the white cap on top of the reservoir and pour in the liquid soap.
(A minimum of 250ml of liquid soap is suggested.)
Wipe away any excess soap that may have been spilt.

 
Metlam Australia sells soap to suit this dispenser – ML_HLS



How to Fill the Paper Towel in the ML_IMC2_SS

Insert paper towel into the paper towel dispenser from the top.

Metlam Australia sells paper towel to suit this dispenser – ML_PT_SLIM

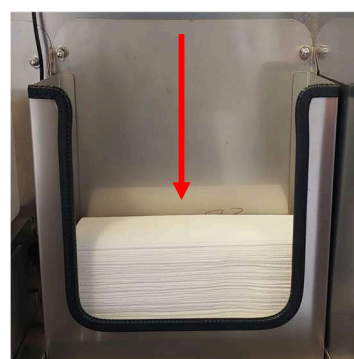

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.