

Modular L Bend Shower Curtain Track System

Material Specifications

- Clear Anodised Aluminium
- All Bends Seamless

Dimensions

- **SCT_MOD1200 x 1200MM:** Modular L Bend Shower Curtain Track System
- **SCT_MOD1600 x 1600MM:** Modular L Bend Shower Curtain System

Components Supplied

- x2 Lengths of Straight Track, x1 Corner Piece, x2 Joiners, x2 Wall Mount Brackets, x1 Ceiling Support Rod, x1 Ceiling Bracket, x1 Track Bracket, x1 Bag of Curtain Hooks

Mounting

- Concealed Screw Fix

Installation Guidelines

- *May be subject to Australian Building Code Regulations for height and location fixing and may be subject to placement as per architectural drawings. In all cases, this is the responsibility of the installer.*
1. Before beginning installation, ensure that the curtain track is the right size, if required, cut it down to the size required.
 2. Insert the joiner halfway into one end of the corner piece. Slide the straight piece onto the other half of the joiner. Repeat the process for the other end of the corner piece.
 3. Attach the track bracket using rivets or self-tapping screws (not supplied). Consider the mounting point on the ceiling and keep in a straight line.
 4. Locate the correct placement on the wall and install the wall mount brackets.
 5. Insert the curtain hooks/runners into the track and then install the curtain track into the wall mount brackets, ensuring the track is level.
 6. Attach the ceiling bracket using the appropriate fixing for the substrate (ensure to affix into a noggin or a solid piece that can support the weight of the curtain track & curtain).





The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

Installation Guidelines Sheet



- 7. Insert the ceiling support rod into the ceiling bracket using the grub screw in the ceiling bracket.
- 8. Insert the other end of the support rod into the track bracket using the grub screw in the track bracket.
- 9. Hang the shower curtain(s), (sold separately) on the curtain hooks/runners to finish the installation.

Please note: For AS1428.1 Compliance, the shower track is to be a minimum of 1160mm x 1100mm

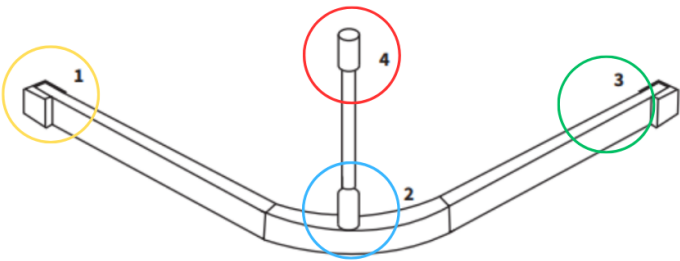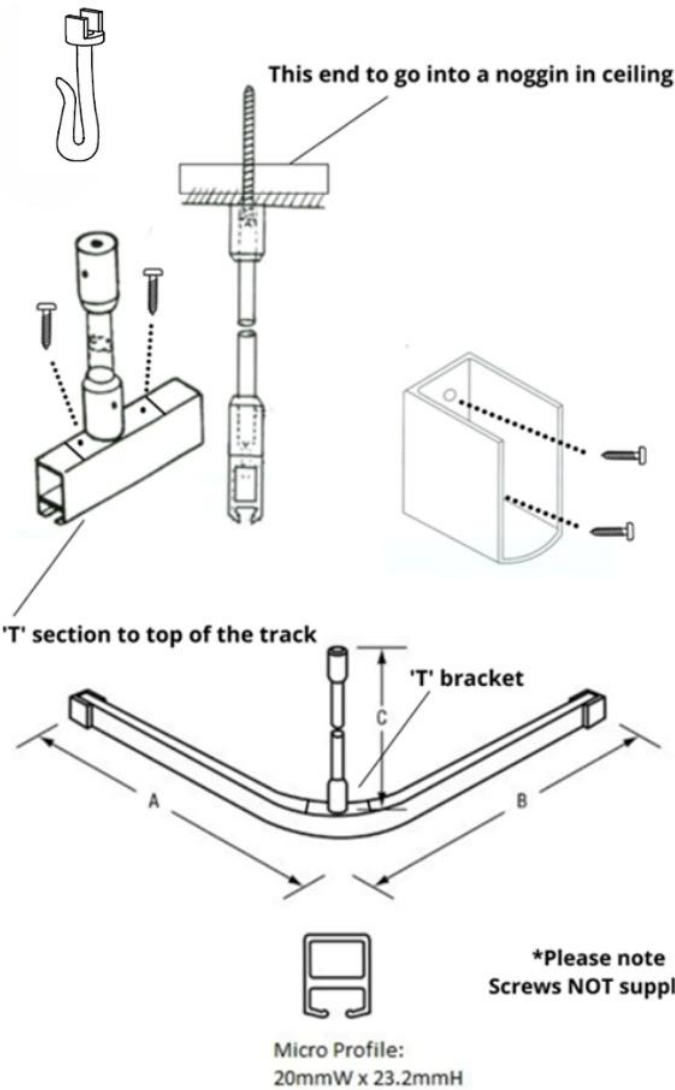


PCS 1, 3 & 4 can be trimmed to size

Ceiling Mount (SCT_CEILINGBRACKET)
Support Rod (SCT_SUPPORTROD)
Track Mount (SCT_TRACKBRACKET)
End Wall Brackets (SCT_WALLBRACKET)

	SCT_MOD1200X1200MM	SCT_MOD1600X1600MM
1	850mm	1150mm
2	350x350mm	450x450mm
3	850mm	1150mm
4	1000mm*	1000mm*

*A 2000mm version is available as a spare part - SCT_SUPPORTROD_2MT

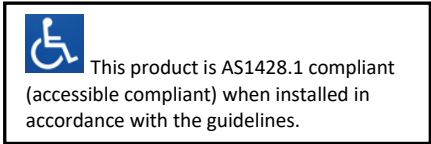

This product is AS1428.1 compliant (accessible compliant) when installed in accordance with the guidelines.

The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products.

The photographs and line drawings of the products presented above are representational only.
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.